


KP-25 Series and KP-27 Series Quick Start Manual



This manual is applied to KP-25 and KP-27

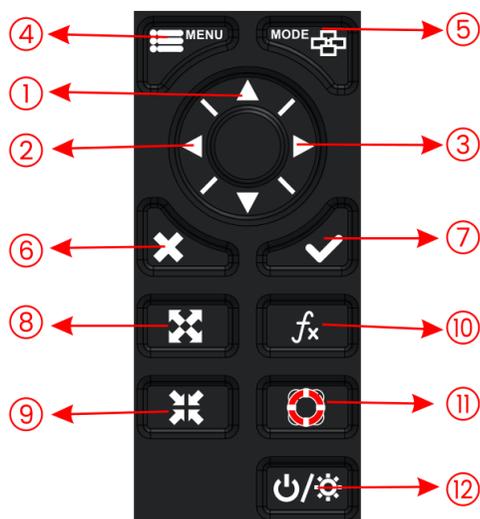


- ① Chartplotter function: Moving the cursor upward or to change the setting.
- ② Chartplotter function: Move cursor to the left.
- ③ Chartplotter function: Moving the cursor to the right.
- ④ Press it once to display the menu of the current page, press it twice to enter the main menu (for Chartplotter, press it three times).
Chartplotter Function: Long press to turn track on/off.
- ⑤ Display screen display mode selection.
Chartplotter Function: Long press to change track color.

- ⑥ Exit the current operation, or display screen display mode selection.
- ⑦ Confirm selection or enter data.
Chartplotter function: Long Press - Activates Drawing Mark option.
Short Press - Activates waypoint attribute edit window.
- ⑧ Chartplotter and AIS Function: Enlarges the scale of the maps and charts.
- ⑨ Chartplotter and AIS Function: Reduces the scale of the maps and charts.
- ⑩ Chartplotter function: Display other functions (GOTO, tide table, search, etc.) menu.
- ⑪ Short Press - Call out AIS detail list.
Long Press - The MOB mark denotes man overboard position.
- ⑫ Long Press - Turn the power ON/OFF.
Short Press - Adjust the screen brightness and control panel dimmer.

Turning ON and OFF Power

Turning on the power by press key, the unit beeps and displays the "ONWA" logo.

Wait for the unit totally boot up to show the below warning page and press to enter working mode.

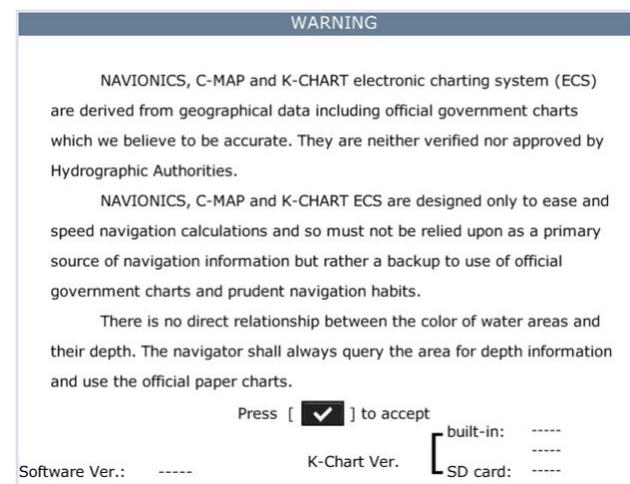

Turning off the power by press and hold until the screen goes off.

Brightness adjustment and day/night display mode settings


1. Brightness adjustment



- ① Short press the key. The adjusting window appears.
- ② Press or to adjust LCD display brightness.
- ③ Press or to adjust keypad backlight.
- ④ Press the key to confirm and exit.


2. Day / night display mode settings

Press the key in this screen to switch between day and night display mode.

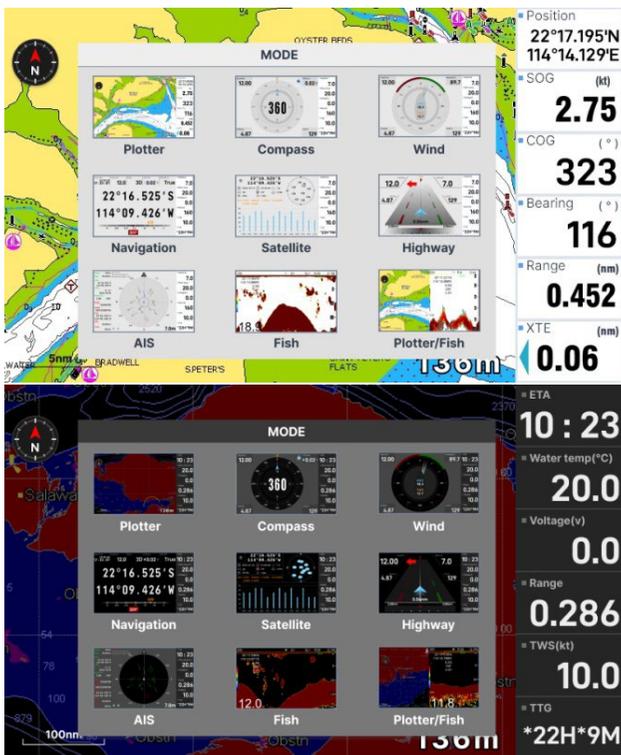

How to select display mode

Press or key in any display mode an Icon selection window will appear as below.

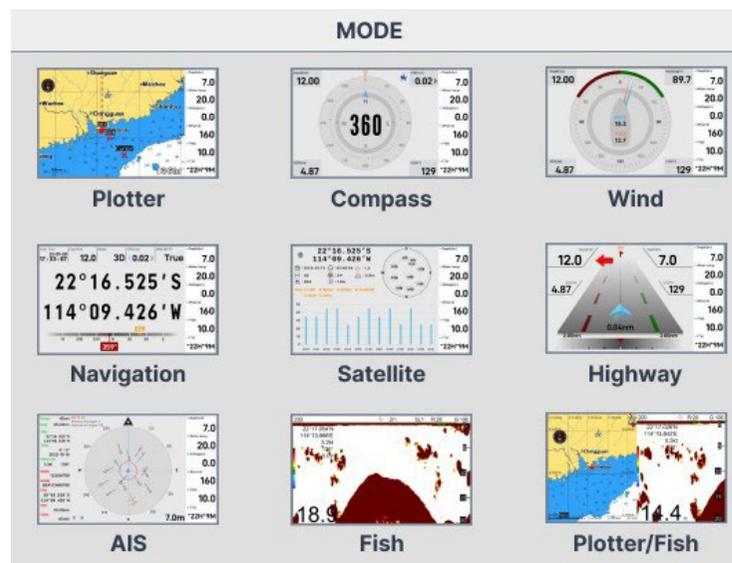

You can use arrow keys to choose a display mode and press to enter that display mode. You can also press key to quit without change display mode.

Note1 : If some display modes cannot be selected (the Icon turns to grey color), please check SETUP menu whether this display mode is turned off.

Note2 : Since Fishfinder function is not available in KP-25, KP-25A, KP-27 and KP-27A so you are not allowed to choose Fish and Chartplotter/Fish mode.

For more details please download the full manual through the following two methods :



<http://www.onwamarine.com>

- ① Scan the QR code
- ② Log in to the above website.



Please consider the environment before printing the manual